MANUAL DE INSTRUCCIONES
MINI-COMPONENTE MULTIMEDIA C/REP DE VIDEO
SX-5264USBT

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

CARACTERÍSTICAS 3
PANEL FRONTAL 3
PANEL POSTERIOR 4
CONTROL REMOTO 5
CONEXIONES DEL SISTEMA 6
PREPARACIÓN 7
USO DEL CONTROL REMOTO 7
CONFIGURACIÓN DEL SISTEMA 8
REPRODUCCIÓN DE VCD 9
REPRODUCCIÓN DE MP3 O DISCOS DE IMÁGENES 10
COPIAR INFORMACIÓN A LA MEMORIA USB 10
RADIO FM/AM 11
FUNCIÓN BLUE-CONNECT 11
CONFIGURACIÓN 12
CONFIGURACIÓN DE AUDIO 14
CONFIGURACIÓN DE VIDEO 14
CONFIGURACIÓN DE PREFERENCIAS 15
RESOLUCIÓN DE PROBLEMAS 16

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

CARACTERÍSTICAS

- Definición horizontal tan alta como 500 líneas al reproducir disco de video.
- Soporte para visión de ángulo múltiple, efectos de escenario para disco de video.
- Opciones de salida de video de 4:3 y 16:9 para coincidir con diferentes pantallas de televisión.
- Sistemas de conversión PAL y NTSC.
- Salida componente para máxima definición en video.
- Bloqueo de padres para establecer niveles de censura.

PANEL FRONTAL

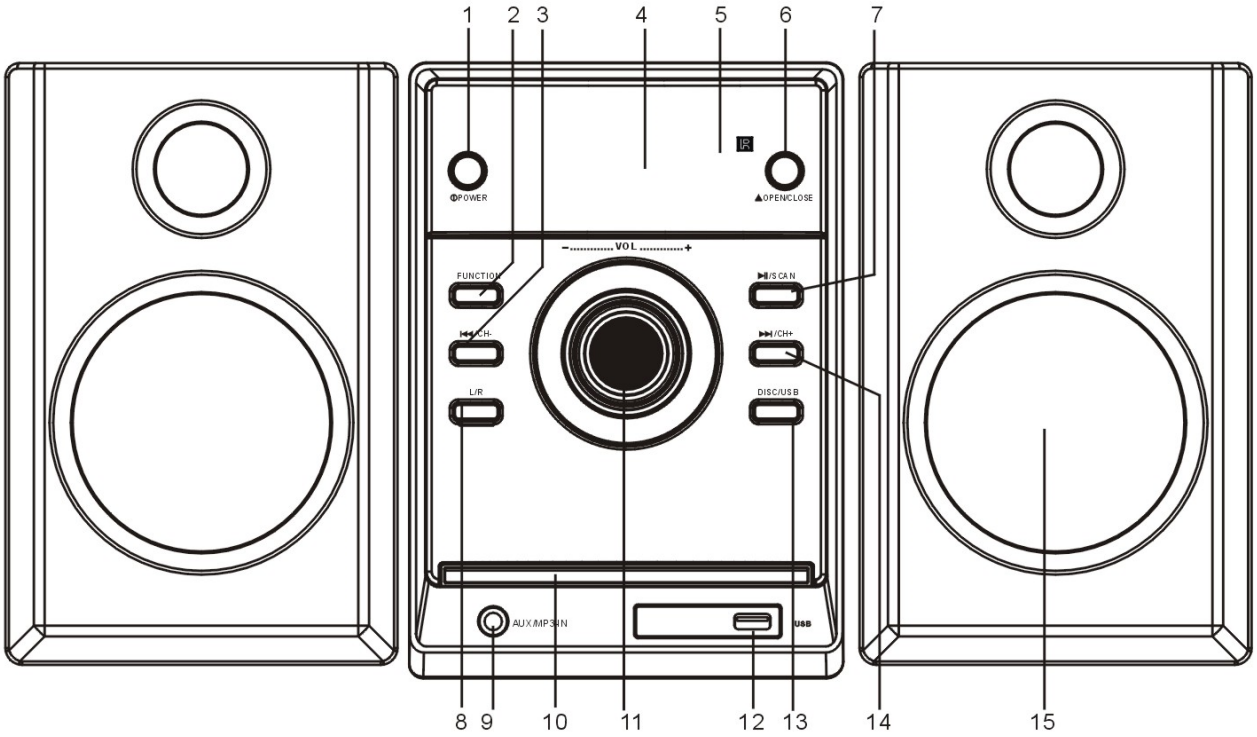

1. Encender
2. Función
3. Anterior/Canal-
4. Pantalla
5. Sensor de control remoto
6. Abrir/Cerrar
7. Play/Pausa/Scan
8. Botón L/R
9. Conector Auxiliar/MP3
10. Compuerta de CD
11. Volumen maestro
12. Puerto USB
13. Botón de Disco/USB
14. Siguiente/Canal+
15. Parlante Woofer

PANEL POSTERIOR

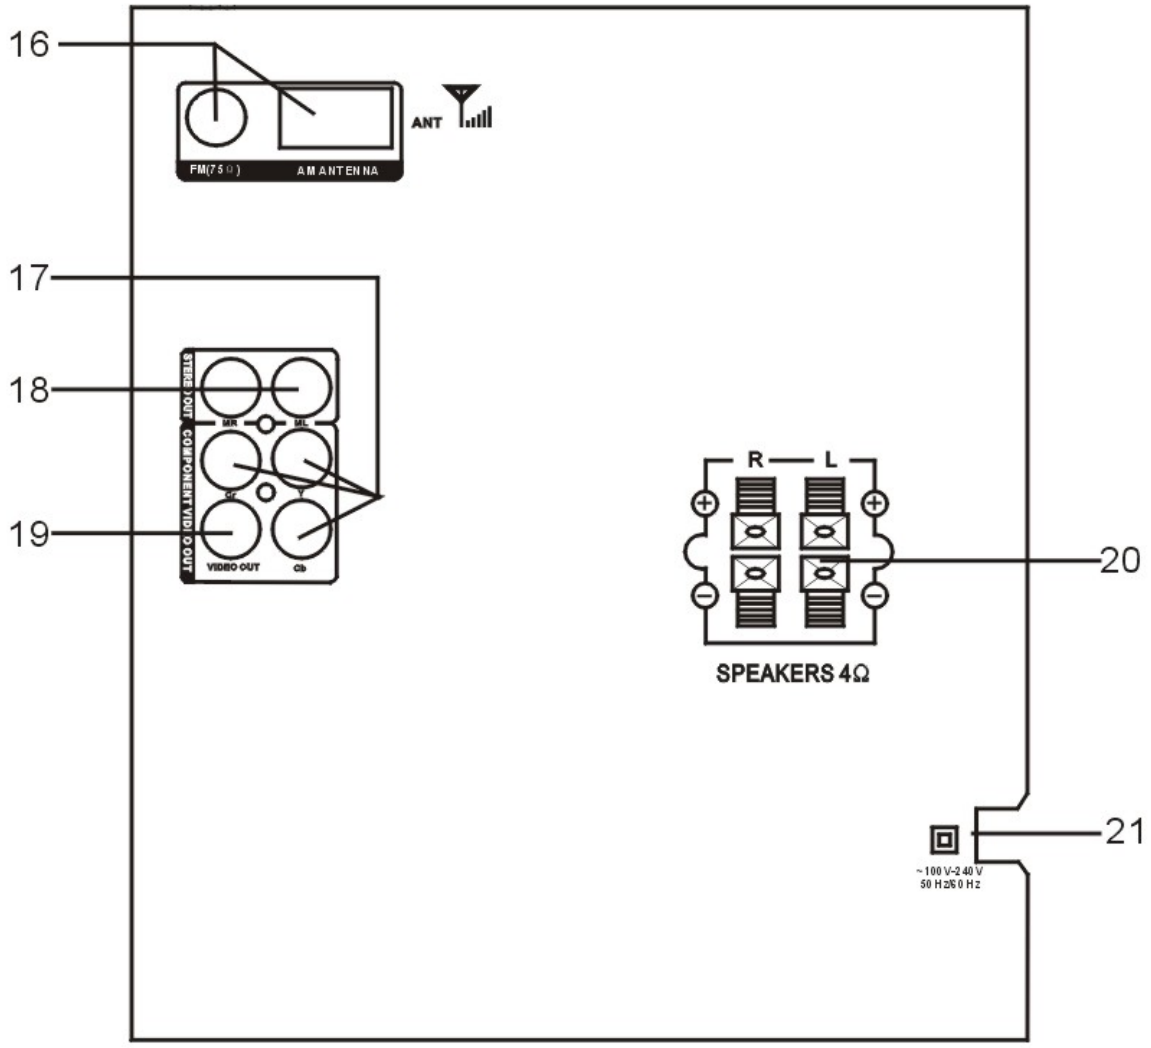

16. Conector de Antena FM/AM
17. Salida de Video (Y, Cb, Cr)
18. Salida de Parlante L/R
19. Conector de Video (CBVS)
20. Entrada de Audio L/R
21. Cable de Poder

CONTROL REMOTO

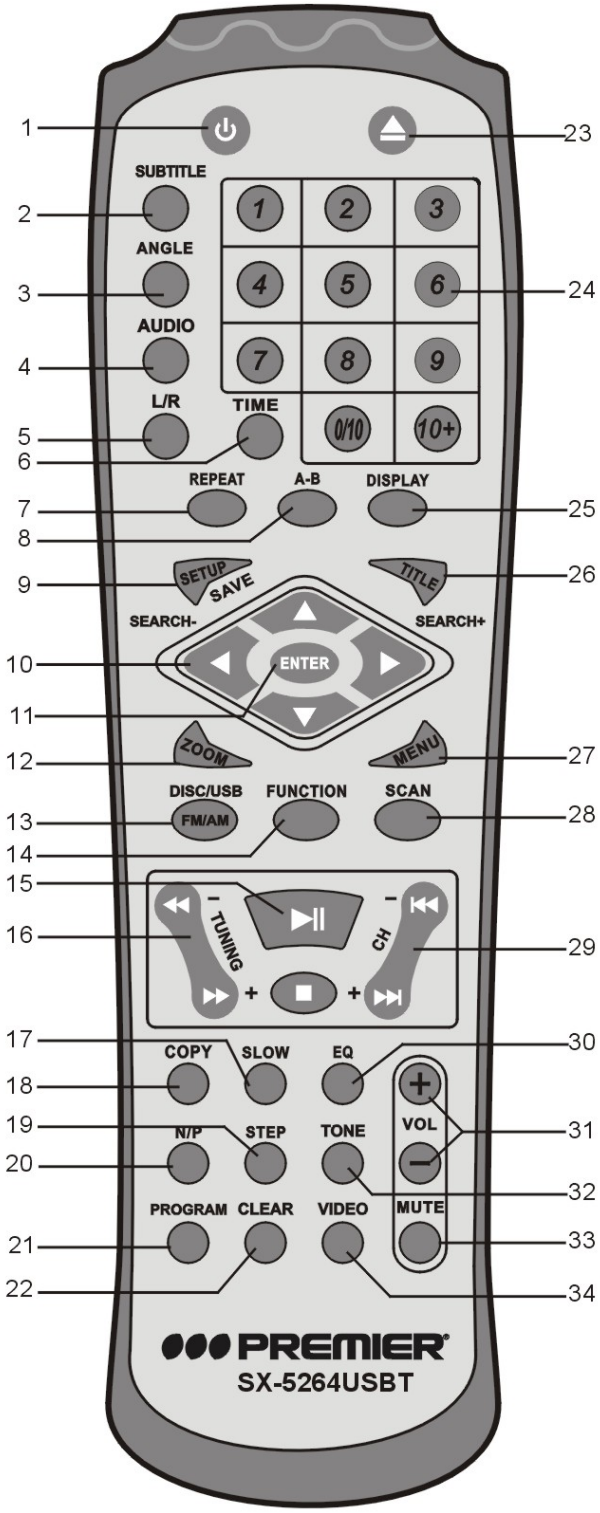

1. Encender
2. Subtítulos
3. Ángulo
4. Audio
5. Botón L/R
6. Tiempo
7. Repetir
8. Repetición A-B
9. Botón de Configuración/Guardar
10. Botones de Dirección
11. Entrar
12. Zoom
13. FM/AM – Disco/USB
14. Función
15. Play/Pausa
16. Adelantar/Canal+
17. Lento
18. Copiar
19. Paso a paso
20. N/P
21. Programación
22. Borrar
23. Abrir/Cerrar
24. Botones numéricos
25. Mostrar
26. Título
27. Menú
28. Scan
29. Anterior/Canal-
30. Ecualización
31. Volumen+/-
32. Tono
33. Silenciador
34. Video

CONEXIONES DEL SISTEMA

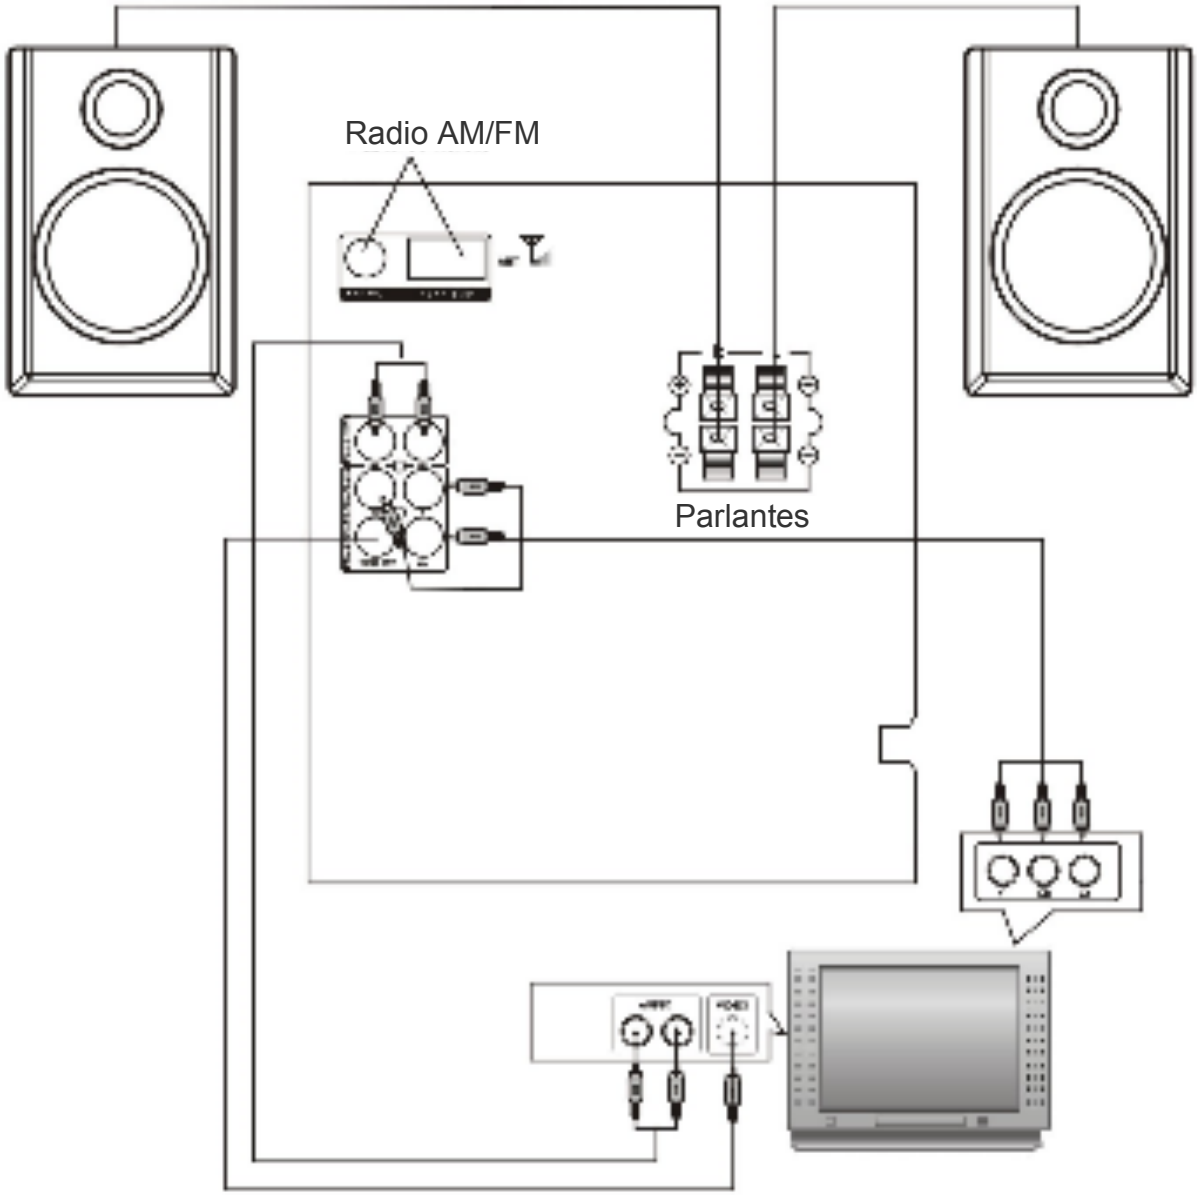

PREPARACIÓN

CARACTERÍSTICAS

1. Alta Definición
La unidad cuenta con codificación de formato MPEG2 y tiene una resolución horizontal por encima de 500 líneas.

2. Función Únicas
Función de ángulo múltiple e idiomas.
Bloque de padres para controlar el acceso al contenido de los discos.

3. Compatibilidad
La unidad puede reproducir los siguientes formatos: MP3, CD, CD-R, CD-RW y CD de imágenes.

4. Salida de Video
Salida estándar

5. Zoom
Aumentar y disminuir el tamaño de las imágenes.

6. Salida de Audio
Salida de audio análoga, salida de audio digital coaxial para conectar con cualquier amplificador.

INFORMACIÓN SOBRE LOS DISCOS

TÍTULO
Las imágenes o la música de un video se dividen en unidades, siendo el Título la más grande. Para discos de video el título es la película, y para los discos de audio es la música. Cada título tiene un número para que la búsqueda sea fácil.

CAPÍTULO
Es una unidad más pequeña que el título en un disco de video. Un título se compone de varios capítulos y cada capítulo tiene un número para facilitar la búsqueda. Puede que algunos discos no tengan los capítulos numerados.

PISTA
La imagen o canción de un CD. Cada pista tiene un número.

USO DEL CONTROL REMOTO

- Abra el compartimiento de las baterías.
- Inserte dos baterías teniendo en cuenta la polaridad.
- Cierre el compartimiento de las baterías.
- Apunte el control remoto al sensor para recibir la señal. Utilice el control en un rango máximo de 8 metros, asegurándose de que no haya barreras en la mitad.

- Las baterías pueden durar unos 6 meses. Cambie las baterías tan pronto el control remoto muestre signos de debilidad.
- Si el control remoto no se va a utilizar por un periodo prolongado retire las baterías para evitar que se derrame el líquido interno.

CONFIGURACIÓN DEL SISTEMA

SISTEMA DE TV
Según el sistema de televisión que se conecte, ajuste la unidad para empatar el tipo de televisor. Seleccione uno de los siguientes sistemas: Multi-Sistema, NTSC, PAL.

MODO DE VIDEO
Según el modo de video del televisor, presione este botón para ajustar el modo de video.

INFORMACIÓN EN PANTALLA
Al reproducir un disco el televisor presione el botón Mostrar. La información que se muestre será la siguiente: Título, Capítulo, Tiempo restante de capítulo, Tiempo transcurrido de capítulo, Tiempo restante de capítulo.

CONTROL DE VOLUMEN
Presione el botón de volumen en el control remoto. Puede ajustar hasta el nivel 12. Utilice los botones + y – para ajustar el nivel deseado.

REPRODUCCIÓN DE MENÚ DE VIDEO
Algunos discos de video tienen menús de título y menús de raíz. Presione el botón Título y la pantalla mostrará el menú en pantalla. Presione el botón Menú para mostrar el menú de la raíz. Presione los botones arriba y abajo para desplazarse por las opciones en pantalla.

SELECCIÓN CON BOTONES NUMÉRICOS
Utilice estos botones para ir directamente a la pista que desee. Si la pista es mayor a 10, utilice el botón 10+ y luego introduzca el segundo dígito. Puede presionar este botón más de una vez para avanzar a pistas con mayor número.

SELECCIÓN DE IDIOMA
Usted puede elegir un idioma de acuerdo con las opciones del disco de video. Utilice el botón Idioma para seleccionarlo.

SELECCIÓN DE CANAL IZQUIERDO Y DERECHO
Utilice el botón R/L para cambiar la salida de audio:
Mono Izquierdo, Mono Derecho, Mix Mono, Estéreo

DETENER REPRODUCCIÓN
Utilice el botón Detener para parar la reproducción.

PAUSA
Presione el botón Pausa para pausar temporalmente la reproducción. Presione Play para reanudar.

ADELANTAR Y RETROCEDER A ALTA VELOCIDAD
Utilice los botones de adelantar y retroceder. La unidad avanzará o retrocederá a las siguientes velocidades cada vez que presione los botones: 2X, 4X, 8X, 16X, 32X, Normal.

CÁMARA LENTA
Presione el botón Lento (slow). La reproducción se hará en cámara lenta en las siguientes velocidades cada vez que presione el botón: 1/2X, 1/4X, 1/8X, 1/16X, normal.

REPETICIÓN DE VIDEO
Utilice este función para repetir una parte del disco. Puede repetir un Capítulo, un Título o Repetir Todo. También puede utilizar la función de repetición A-B. Presione este botón para establecer el punto de inicio de la sección (A) que desea reproducir y presione una vez más en el final de la sección (B). La reproducción se hará entre estos dos puntos. Presione una vez más para cancelar.

SUBTÍTULOS
Utilice el botón de Subtítulos para seleccionar los subtítulos disponibles en el disco.

SELECCIÓN DE ÁNGULO
Algunos discos tienen imágenes con diferentes ángulos. Usted puede seleccionar varios de ellos con el botón de Ángulo. (El disco debe tener la función disponible para poder activarla).

ZOOM
Esta función se puede utilizar para ampliar el tamaño de las imágenes con o sin movimiento. Presione el botón Zoom. Cada vez que lo presione la imagen cambia de tamaño en las siguientes proporciones: 2X, 3X, 4X, normal. Una vez la imagen esté grande, utilice los botones de dirección para desplazarse a través de ella.

BÚSQUEDA POR TIEMPO
Usted puede introducir directamente un tiempo, título o número de capítulo para ir allí. Por ejemplo, para ir al título 6 presione el botón 6. Al presionar el botón de nuevo, la búsqueda se hará por tiempo. Introduzca, por ejemplo, los números 0, 3, 2, 0 para ir al minuto 03:20.

REPRODUCCIÓN DE VCD

- Las funciones en general son las mismas, pero hay algunas diferencias.
- Al presionar el botón Mostrar, la unidad informa sobre el tiempo transcurrido y restante de una pista, y el tiempo total transcurrido y restante.
- La función de Repetición le permite repetir una pista o todas las pistas.
- Con el botón de Programación usted puede hacer una lista de pistas para reproducir. Presione el botón y luego los botones numéricos para seleccionar las pistas. Luego use los botones de dirección para cambiar la posición y elegir otra pista.
- Sólo la función de Búsqueda de Tiempo está disponible con el botón Tiempo.

REPRODUCCIÓN DE MP3 O DISCOS DE IMÁGENES

Utilice los botones para seleccionar las pistas de los discos.

La pantalla se verá de la siguiente forma al cargar un disco.

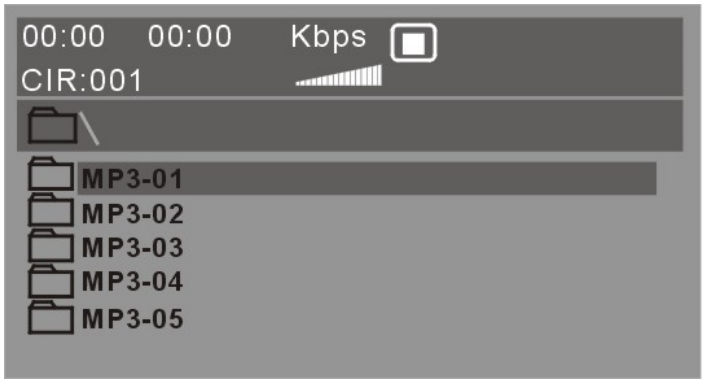

Usted puede escanear todos los directorios en el disco utilizando los botones de dirección. Utilice el botón Entrar para reproducir las pistas.

Con la función de repetición usted puede repetir una pista o una carpeta.

COPIAR INFORMACIÓN A LA MEMORIA USB

Coloque un CD en la unidad.
Conecte una memoria USB.
Presione el botón Copiar. Aparecerá el menú de copiado en pantalla. Utilice los botones de dirección para moverse a través de las pistas y utilice el botón Entrar para seleccionar las pistas que desea copiar.

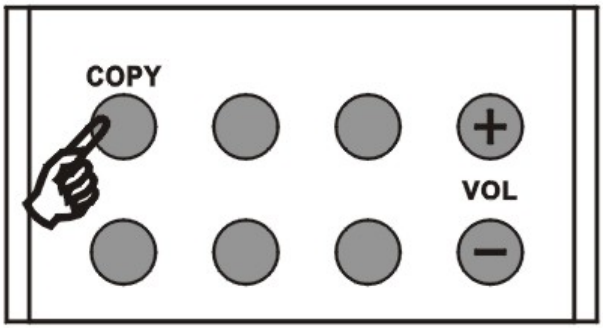

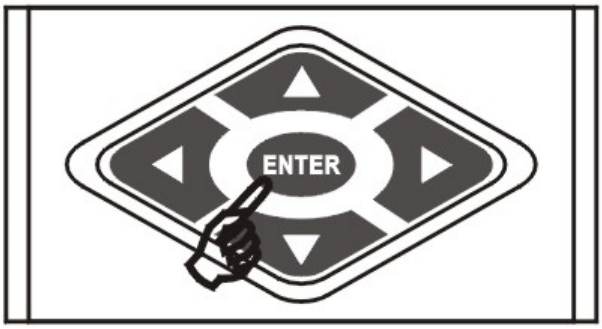

Mueva el cursor al botón “Comenzar” y presione Entrar. Se verá el proceso de transformación de formato de CD a formato MP3. Presione Salir al terminar el proceso de copiado. Utilice el mismo proceso para copiar archivos MP3 y archivos de imagen.

RADIO FM/AM

- Active la función de radio.
- Conecte la antena AM/FM.
- Presione el botón FM/AM para cambiar de modo radial.

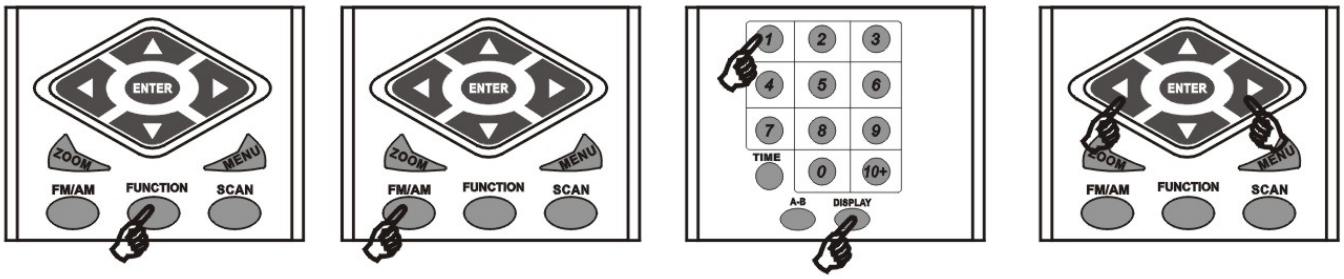

- Para seleccionar una estación radial utilice los botones numéricos en el control remoto para ir directamente a ella. (Recuerde que el rango de frecuencias va de 87.50 a 108 MHz en FM y de 530 a 1600KHz en AM).
- Utilice los botones de dirección izquierda y derecha para buscar estaciones radiales.
- Utilice los botones canal-/+ que la unidad busque automáticamente las estaciones radiales.
- Utilice el botón Scan para que la unidad haga una búsqueda automática de las estaciones radiales con mayor potencia y las guarde en la unidad en secuencia de menor a mayor.
- También puede guardar manualmente las estaciones radiales. Una vez esté ubicado en una, presione el botón Guardar; la pantalla parpadeará. Luego presione los botones canal-/+ para seleccionar la ubicación de la estación. Luego presione de nuevo el botón Guardar para confirmar la grabación.

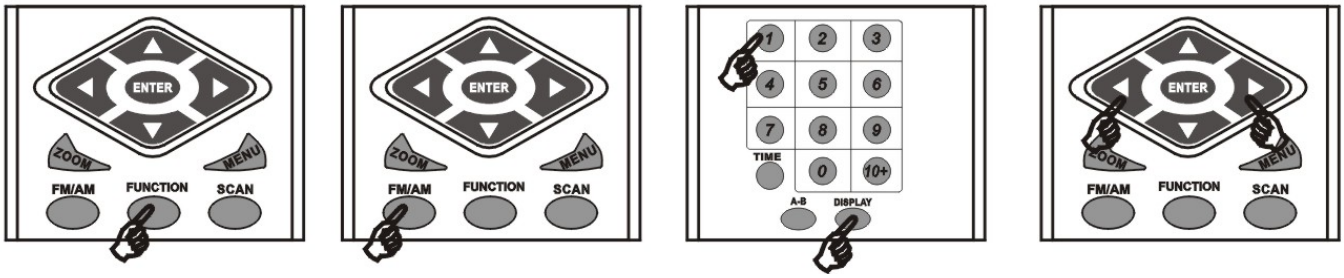

FUNCIÓN BLUE-CONNECT

1. Presione el botón de función para cambiar a Blue-Connect. Las letras BT se verán en la pantalla.
2. Active la función Blue-Connect en dispositivo móvil, por ejemplo, teléfono celular.
3. Introduzca el modo de enlace. Busque la unidad SX-5264USBT. Introduzca la contraseña 0000 si el dispositivo lo solicita.
4. El enlace será correcto cuando escucho un ‘bip’ en los parlantes.

CONFIGURACIÓN

CONFIGURACIÓN DEL MENÚ

Presione el botón de Configuración y utilice los botones izquierdo y derecho para moverse a través de las funciones. Presione el botón Enter para confirmar. Aquí se muestra una visión general del menú.

FIRST LEVEL MENU	SECOND LEVEL MENU
TV DISPLAY	NORMAL/PS
	NORMAL/LB
	WIDE
ANGLE MARK	ON
	OFF
OSD LANG	ENGLISH
	PORTUGUESE
	SPANISH
	CHINESE
SPDIF OUTPUT	SPDIF OFF
	SPDIF/RAW
	SPDIF/PAN
CAPTIONS	ON
	OFF
SCREEN SAVER	ON
	OFF
HDCD	OFF
	1X
	2X

NORMAL/PS
Se selecciona cuando la unidad se conecta a un televisor normal.
Las imágenes de pantalla ancha se muestran, pero algunos bordes se cortan automáticamente.

NORMAL/LB
Se selecciona cuando la unidad se conecta a un televisor normal.
Las imágenes de pantalla ancha se muestran, y se colocan franjas negras arriba y abajo.

ANCHA
Selecciona esta opción cuando conecte la unidad a un televisor de pantalla ancha.

MARCA DE ÁNGULO
Sólo funciona cuando el disco cuenta con la función de ángulo.

IDIOMA OSD
Seleccione el idioma de la interface.

SUBTÍTULOS
Muestra y oculta los subtítulos.

PROTECTOR DE PANTALLA
Activa el protector de pantalla. Esta imagen aparece cuando la unidad se detiene o la imagen ha estado quieta por unos minutos. Esta protección evita que la pantalla se dañe.

CONFIGURACIÓN DE AUDIO

FIRST LEVEL MENU	SECOND LEVEL MENU	THIRD LEVEL MENU
SPEAKER SETUP	DOWNMIX	LT/RT
		STEREO
		V SURR
		5.1 CH
	FRONT SPEAKE	LARGE
		SMALL
	CENTER SPEAKER	LARGE
		SMALL
		OFF
	REAR SPEAKER	LARGE
		SMALL
		OFF
	SUBWOOFER	ON
		OFF
SPDIF OUTPUT	SPDIF OFF	
	SPDIF/RAW	
	SPDIF /PCM	

CONFIGURACIÓN DE PARLANTE
Downmix
Parlante Frontal
Parlante Central
Parlante Posterior
Subwoofer

SALIDA SPDIF

CONFIGURACIÓN DE VIDEO

FIRST LEVEL MENU	SECOND LEVEL MENU
COMPONENT	OFF
	YUV
	RGB
SHARPNESS	HIGH
	MEDIUM
	LOW
BRIGHTNESS	00
CONTRAST	00

Componente, Nitidez, Brillo y Contraste

CONFIGURACIÓN DE PREFERENCIAS

FIRST LEVEL MENU	SECOND LEVEL MENU	THIRD LEVEL MENU
TV TYPE	MULTI.SYSTEM	
	NTSC	
	PAL	
AUDIO	ENGLISH	
	PORTUGUESE	
	SPANISH	
	CHINESE	
	OFF	
SUBTITLE	ENGLISH	
	PORTUGUESE	
	SPANISH	
	CHINESE	
	OFF	
DISC MENU	ENGLISH	
	PORTUGUESE	
	SPANISH	
	CHINESE	
	OFF	
PARENTAL	1 KID SAF	
	2 G	
	3 PG	
	4 PG 13	
	5 PGR	
	6 R	
	7NC17	
	8ADULT	
PASSWORD	CHANGE	
DEFAULTS	RESET	

TIPO DE TV
Elija el modo según tipo de televisor.

AUDIO, SUBTÍTULOS Y MENÚ DE DISCO
Elija el idioma para estos parámetros.

CONTROL DE PADRES
El contenido de un disco con función de bloqueo se evalúa por grados. Usted puede seleccionar el grado de edad según necesite. Introduzca la contraseña 0000 para controlar estos grados.

CONFIGURACIÓN DE FÁBRICA
Elija la opción Restaurar para reiniciar todas las funciones de la unidad.

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
No hay sonido	Verifique si la unidad está conectada correctamente. Asegúrese de conocer la operación del amplificador externo que utilice.
No hay imagen, la imagen se mueve y está sin color	Verifique las conexiones de la unidad. Asegúrese de configurar correctamente el sistema de TV.
Mala calidad del sonido	Asegúrese de que la salida de audio está bien conectada. Asegúrese de que la conexión sea correcta entre la unidad de audio y el amplificador.
No se puede reproducir el disco	El disco puede estar sucio o estar rayado. Intente limpiándolo o utilice otro disco.
El control remoto no funciona bien	Verifique el estado de las baterías y reemplace de ser necesario.

• Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL
MULTI-MEDIA MINI-COMPONENT W/VIDEO
SX-5264USBT

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

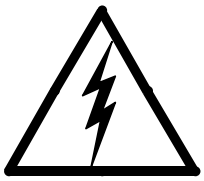

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Contents:

FEATURES OF VEDIO PLAYERS

- Horizontal definition as high as 500 lines when playing a video disc
- Supports for multi-angle view,stage effects for a video disc
- Video output choices of 4;3 and 16:9 to match different TV screens
- PAL and NTSC system convert, component output to ultimate the video definition
- Parental Lock. Afraid of their children watching some so-called unsuitable movies can set the player to different classes such as G,PG-13,MC-17 etc…

FRONT PANEL

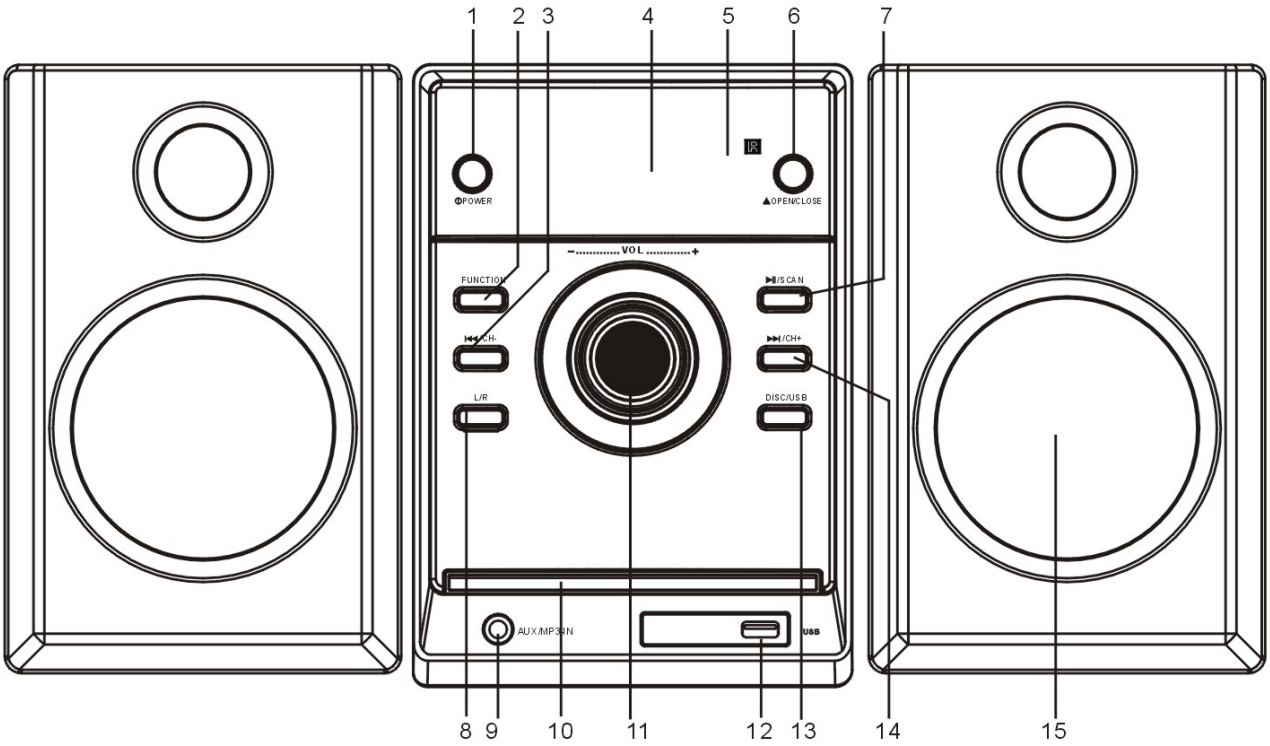

1. POWER Switch
2. FUNCTION key
3. PREV/CH- key(Radio)
4. Display Screen
5. Remote control receiver
6. OPEN/CLOSE key
7. Play/pause /Scan(Radio)
8. L/R key
9. AUX/MP3-IN jack
10. CD Door
11. Master Volume control
12. USB Jack
13. DISC/USB key
14. NEXT/CH+ key(Radio)
15. Woof speaker

REAR PANEL

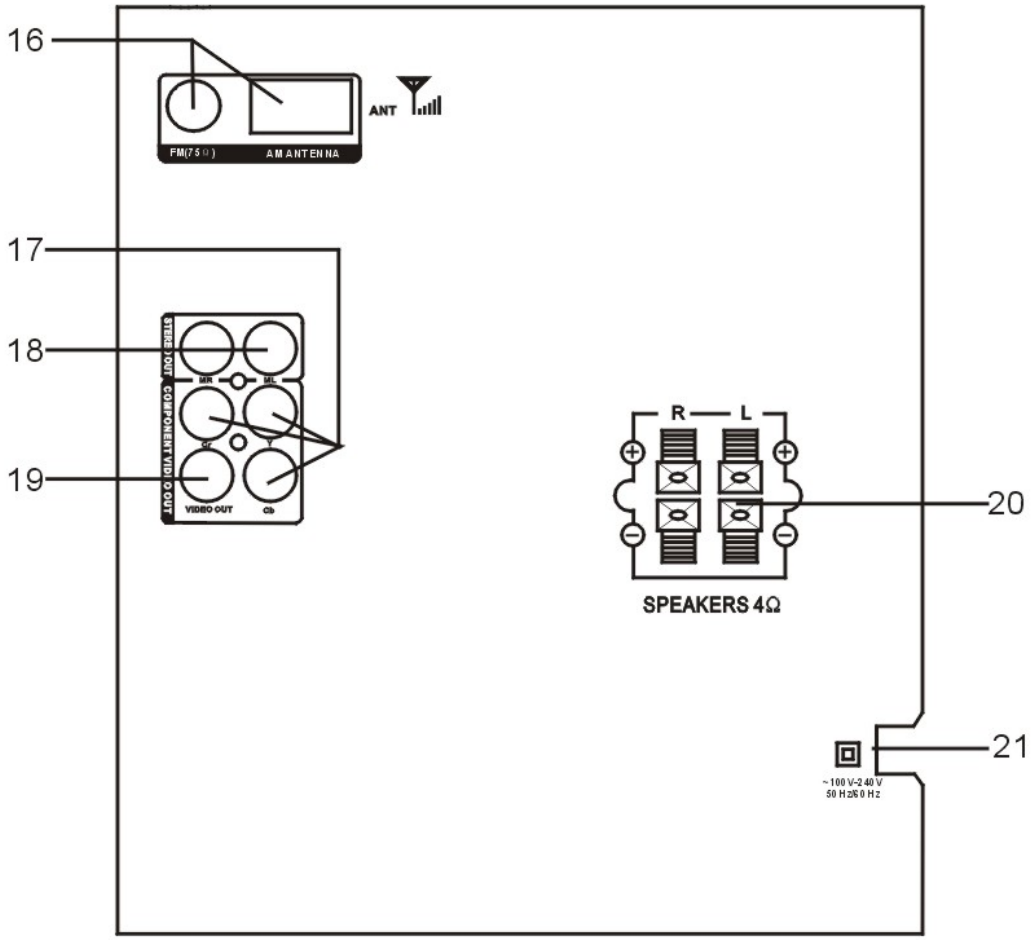

16. FM/AM ANTENNA Jack
17. VIDEO OUT(Y.Cb,Cr) Jack
18. L/R SPEAKER OUT jack
19. VIDEO (CVBS)Jack
20. L/R AUDIO IN Jack
21. POWER Cable to AC100V-AC240V power source

REMOTE CONTROL

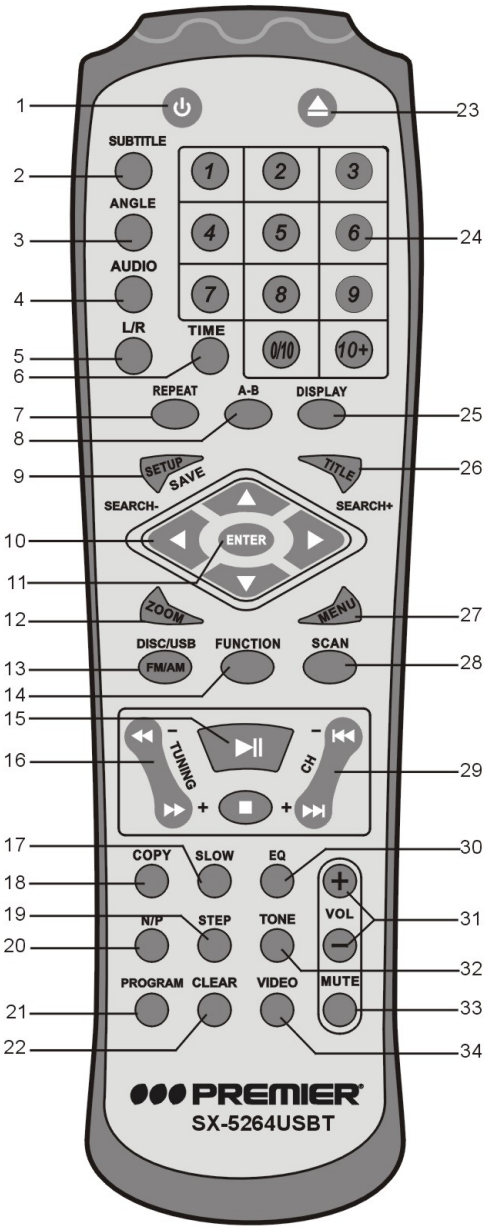

1. POWER Switch
2. SUBTITLE key
3. ANGLE key
4. AUDIO key
5. L/R key
6. TIME key
7. REPEAT key
8. A-B repeat key
9. SETUP key/SAVE key(Radio)

10. Direction key:
(UP key) (DOWN key)
(LEFT key) (RIGHT key)
(SEARCH-key) (SEARCH+ key)(Radio)
11.ENTER key
12. ZOOM key
13. FM/AM key
DISC/USB key
14. FUNCTION key
15. PLAY/PAUSE key
16. FAST RWD/FWD key
TUNING-/TUNING+ key(Radio)
17. SLOW key
18. COPY key
19. STEP key
20. N/P key
21. PROGRAM key
22. CLEAR key
23. OPEN/CLOSE key
24. Number(0-9,10,10+) key
25. DISPLAY key
26. TITLE key(PBC)
27. MENU key(PBC)
28. SCAN key(Radio)
29. PREV/NEXT key
CH-/CH+ key(Radio)
30. EQ key
31. VOL+/VOL- key
32. TONE key
33. MUTE key
34. VIDEO key

SYSTEM CONNCETIONS

Before you finish the connections of the system, please do not power on the player and the equipment connected to it.

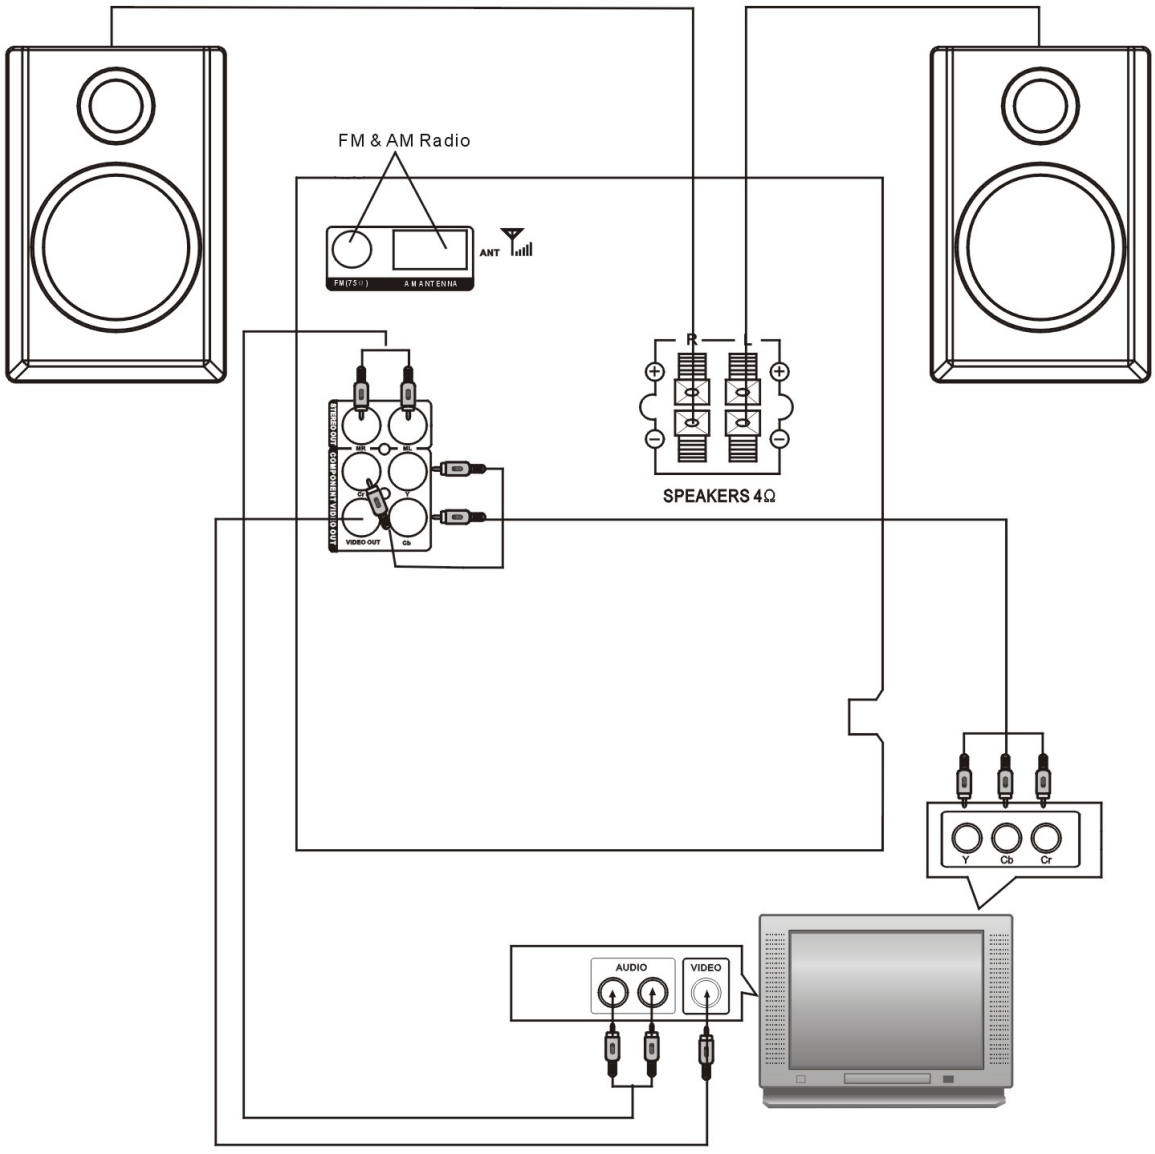

PREPARATIONS BEFORE OPERATION

FEATURES

1. HIGH DEFINITION
   The unit adopts MPEG2 coding format and brings the horizontal resolution above 500 lines
2. UNIQUE FUNCTIONS
   Multi-angle and multi-language bring unipue trick functions.
   Parent lock makes it easy to control the content of discs.
3. COMPATIBILITY
   The unit can play discs, and is compatible with MP3,CD,CD-R,CD-RW,and PIC-CD discs
4. ZOOM
   It can enlarge pictures or reduce pictures.
5. VIDEO OUTPUT
   Standard video, CVBS signal output mode.

6. AUDIO OUTPUT
   Analog audio output, coaxial digital audio output can be connected with any amplifier

ABOUT MANUAL

PRINCIPLES FOR WRITING

This manual mainly introduces how to use buttons on the remote control. You may operate the unit if buttons on the unit have the same or similar names as or to those on the remote control.

TERMS FOR DISCS

TITLE

The images or music of a VIDEO are divided into some units, among which title is the biggest one.
For an image in video-discs, title is movie, for a piece of music in audio discs, it is music.
Each title has a number that makes it easy to search.

CHAPTER

It is smaller than title among the units of a VIDEO disc. A title is made up of several chapters, and each chapter has a number for search, but some discs may not have numbered chapters.

TRACK

The image or music of a CD, each track has a number for search.

USE REMOTE CONTROL

1. Open the battery compartment.
2. Insert two batteries, make sure to match“+”and“ -” of the batteries to the marks in the battery compartment.
3. Close the battery compartment.
4. Point the remote control at the remote sensor , operate in the range of 8 meters away from the front of the remote sensor. Make sure there is no barrier between them.

NOTES:

1. Batteries can last for about 6 months generally. Change the batteries of the remote control that does not work.
2. If the remote control is not used for a long time, remove the batteries to prevent battery leakage.

BASIC OPERATIONS

NOTICE: This manual mainly introduces how to use buttons on the remote control..
You may operate the unit if buttons on the unit have the same or similar names as or to those on the remote control.

SYSTEM SETTING

According to the system of the TV to be connected, set the system of the unit to make it match the TV type

1. If the system of the TV is multi-system, select the menu item in the Setup Menu as :
   PREFERENCES > > TV TYPE > > MULTI SYSTEM
2. If the system of the TV is NTSC, select the menu item in the Setup Menu as :
   PREFERENCES > > TV TYPE > > NTSC
3. If the TV is PAL, select the menu item in the Setup Menu as :
   PREFERENCES > > TV TYPE > > PAL

V-MODE SETTING

According to the video mode of TV set, push“V-MODE” key to setup its video mode that matching to the video mode of TV set. DELETE V-MODE

DISPLAY

When playing discs, the TV screen shows the information as :
First pressing “DISPLAY” key, TITLE ** /** CHAPTER ** /**
Second pressing “DISPLAY” key: TITLE REMAIN **: ** : **
Third pressing “DISPLAY” key: CHAPTER ELAPSED **: ** : **
Forth pressing “DISPLAY” key: CHAPTER REMAIN **: ** : **

VOLUME CONTROL

Push VOLUME button on the remote control.
The screen shows: IIIIIIIIIIIIIIIIIII……12
Push + button or - button to raise or lower the volume.

VIDEO MENU PLAY

Some VIDEO discs have title menus and root menus. Push “TITLE”button,the screen shows the title menu. Push “MENU”button, the screen shows the root menu. Push “UP”botton or “DOWN”button, the screen shows the last page or next page. Push number button to select Directly

SELECT WITH NUMBER BUTTON

Load a disc, Push number button to select tracks after the unit finishes reading the disc.

1. If the track number is less than 10, just push a button among 1-10.

If the track number is over 10, push 10+ once on the remote control and a button among 1-10.

SELECT LANGUAGE

You can choose the language according to your choice when playing multi-language VIDEO disc.

Note:

1. Different disc has different languages
2. You can push“LANGUAGE”button to choose the language you want when you play multi-language VIDEO discs.

SELECT LEFT / RIGHT CHANNELS

You may select channel when it plays.

Push R/L button, the screen show alternately and select the desired audio channel:

MONO LEFT

MONO RIGHT

MIX MONO

STEREO

STOP PLAY

It will stop when you push STOP key, and it will play again if you push PLAY key.

PAUSE PLAY

Push PAUSE key, it will stop playing, and it will play again if you push PLAY key.

FAST PLAY

When playing disc, you may play it forward fast or reverse it fast to find what you need.

1. Push >> to play forward fast. Each time you push the button, the screen shows orderly. FF2X/4X/8X/16X/32X/PLAY
2. Push<< to reverse the disc fast. Each time you push the button. the screen shows orderly: FR2X/4X/8X/16X/32X/PLAY

SLOW PLAY

Enjoy slow motions by the following steps.

Push SLOW button to play slowly.

SF 1/2X-----1/4X-----1/8X-----1/16X----PLAY

STEP PLAY

When play VIDEO disc, you may choose step play,it will go ahead one frame by pushing“STEP” key one time, and it will come back to normal playing state if you push “PLAY” 。

REPEAT PLAY

When play VIDEO disc, this function can be used to repeatedly play a title, chapter or disc.

Push“REPEAT”button, the screen shows orderly.
CHAPTER REPEAT ON------- TITLE REPEAT ON------ REPEAT ALL----- REPEAT OFF
You may repeat one part of the disc, push “A-B”key, the screen shows altemately:
A TO B SET A
A TO B SET B
A TO B CANCELLED
On this monent, it will play from the beginning point to the ending of this part in repeated may, you may cancel it if you push “A-B”key, and the logo on the top left comer will disappear

SELECT SUBTITLES

When play a multi-subtitle VIDEO disc, you may select one subtitle to show it on the screen.
1. Push“SUBTITLE”button to select one.
2. Push“SUBTITLE”button until the screen shows “SUBTITLE OFF”
For some discs, subtitles cannot be removed.
Subtitle function is only available for some discs with subtitle recorded.

SELECT ANGLE

Some discs have images with different screen angles, you may select among them. For example, when you watch a running train, you may select to watch it from the front, the left window or the right window without stopping it.
Example:
VIDEO disc has four screen angles at your option.
1. Push “ANLGE”button to select angle, The screen shows orderly

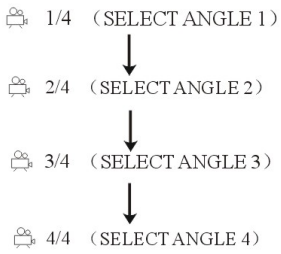

ZOOM PLAY

This function can be used to enjoy a motion or motionless picture.
1. Push“ZOOM”button when playing, the screen shows orderly:
ZOOM X2
ZOOM X3
ZOOM X4
ZOOM OFF
2. Push “UP/DOWN/LEFT/RIGHT”button to move the enlarged picture.
3. To resume the picture, push“ZOOM”until the screen shows “ZOOM OFF”

TIME SEARCH

You may directly enter a time, title or chapter number to scrach fast on a disc. The unit plays form the point.
When first push“TIME”,search a title.

Example: Search title 6.
1. Push the < or > buttons and move the cursor to illuminate the title number.
2. Push button 6, select title 6.
3. The search is complete, the disc is played from title 6
   When second push“TIME”,search a time.

Example: Search 03:20
1. Push the < or > buttons and move the cursor to illuminate the time number, enter 0,0,3,2,0
2. The scrach is complete, the disc is played from 03:20.

PLAY VCD DISC

NOTICE：When the unit playing VCD, difference as follows:

DISPLAY (VCD)

Push“DISPLAY”button, the screen shows orderly:
SINGLE ELAPSED
SINGLE REMAIN
TOTAL ELAPSED
TOTAL REMAIN
DISPLAY OFF

REPEAT PLAY (VCD)

You may repeat a track, a disc according to the following steps. After the unit stops, push number buttons directly to select tracks Push“REPEAT”button, the screen shows orderly:
REP-TRACK-------- REP-ALL-------- REPEAT OFF

PROGRAM PLAY (VCD)

1. Push“PROGRAM”button, the screen shows:

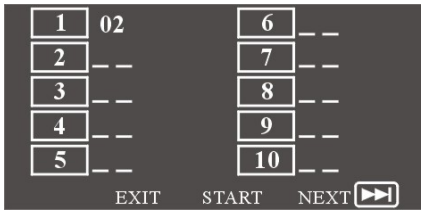

2. Push number button to select the songs.
3. After the programming is finished, Push the direction buoons and move the cursor to “START”and Push “ENTER”button to start playing.

TIME SEARCH (VCD)

Push “TIME”button when the unit plays VCD, only TIME function is available.

PLAY MP3 OR PIC-CD DISC

USE NUMBER BUTTONS SELECTTRACKS (MP3 OR PIC-CD)

1. The screen will display as below after the disc is loaded

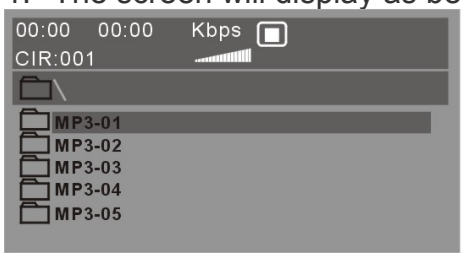

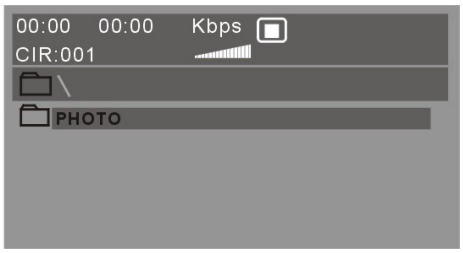

2. You can scan all the directors on the disc by using direction button. You can play the directory or songs you selected by the direction on button and ENTER
   Note:
   If the number of directory or songs is over 6, you can use four directions keys to select the item you prefer. You also can use“UP ”button or “DOWN” button to change the page numver.
3. In the above status, you can use “LEFT” button or “DOWN” button to select the playing Are a then push “UP” button or “DOWN” button to select the item you want to play

SELECT PLAYING MODE (MP3)

When playing, push “REPEAT”button, you can select “SINGLE”, “FOLDER”.
“REP-ONE”， “REPEAT FOLDER”

INSTRUCTION OF USB’S COPY FUNCTION

& Transfer and deposite function of CD

1. Insert USB into VIDEO player and put CD dish;
2. Press the “COPY” function key, there are “CD RIP” manu on the TV screen, Press “Left , Right” key to move the cursor on the CD music list, then press“ENTER” key to choose the music that you need transfer and keep.

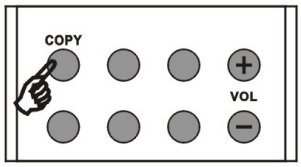

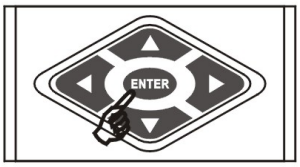

3. Moving the cursor to “start” then press “ENTER”, there will show the process of CD music list transform into USB with MP3 format on TV screen. Press “EXIT” key after finished copy.

& The Copy function of MP4 Player

1. Insert USB into VIDEO player and put MP4 dish
2. Press “STOP” key into the dish manu after entering play condition. Press “UP, DOWN” key to choose the music which need copy.
3. PRESS on the remote control "COPY" button, the system itself to the selected tracks copied to USB devices, copy automatically after the completion of exit

& The copy way of MP3 、JPEG file is same with Mp4.

FM/AM RADIO FUNCTION

1. Turn to the radio FM / AM function;
Connect FM / AM antenna, open the power, when playing or stop with no disc mode, press the remote control FUNCTION button(picture 1), then machine can transform to FM radio; continue press the remote control FM / AM button(Picture 2) can switch between the FM and AM .

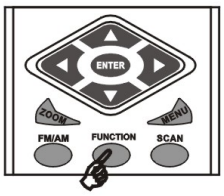

Picture 1

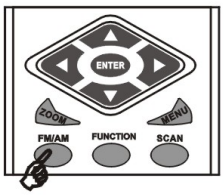

Picture 2

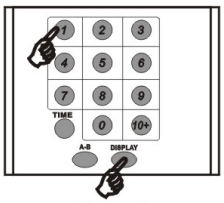

Picture 3

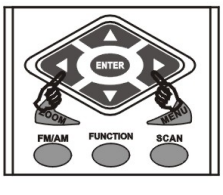

Picture 4

2. Selected the radio programs
1) Tuning radio program directly: press number "0-9" key(Picture 3) on the remote control can enter the one frequency directly you want to listen radio program. If you want to listen to "103.60" Mhz radio, according to input 10360, the display shows: FM10360MHz ". Note: the FM frequency is between 87.50-108MHz, and the AM frequency is between 530-1600KHz. So if out of those ranges, the input radio program is invalid.
2) Press " " key (Picture 4) can search radio programs: When in one frequency program, press the" " key can jump up or down another frequency. Each FM radio program level is 0.05MHz and AM radio is 10 KHz;.
3) Press "TUNING- / TUNING +" button (Picture 5), the machine will automatically search up or down until switch to another radio program.
4) Fully automatic search program: press the remote control or the SCAN button(Picture 6)on front panel, the machine will search programs from the low to high frequency of FM / AM and automatically stored in sequence. Press the remote control or the panel CH-/CH+ key(Picture 7), the radio program forward or backward conversion .
3 . Storage platform operations:
Storage radio program: You can store the current radio frequency to the station you want to, such as deposit to make 99.6 MHz sixth program, press the selected the programs of operator 1, to the radio 99.6 MHz, then "SAVE" button(Picture 8) , and the display digit will flash, then quickly press the remote control or the CH-/CH + keys on panel you want the radio program, then press the "SAVE" button again and this means you are successfull to storage radio program now.

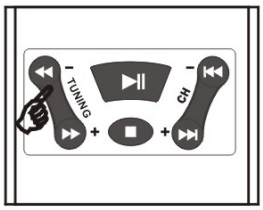

Picture 5

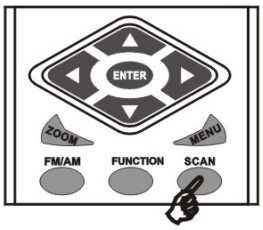

Picture 6

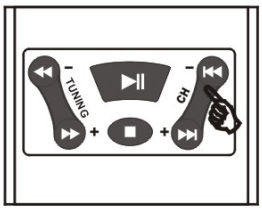

Picture 7

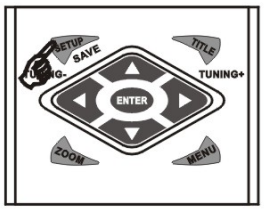

Picture 8

BLUE-CONNEC FUNCTTION:

1. Press function key to switch unit to blue-connect function , the “BT” display on the LED.
2. Turn on the bluetooth function for your bluetooth device , such as your mobile phone.
3. Enter the pairing mode, search the micro-component device name “SX-5264USBT “. Enter ‘0000’ As the pairing password if request.
4. Blue-connect connection successful after “DU” sound listened from speaker.
5.

FUNCTION SETTING

MENU SETTING

According to the recorded infornation and external equipment, set the following functions for DVD to obtain the best playing status. Push “SETUP” button to set the main menu. Specific setup way: press“UP”“DOWN”“LEFT”and“RIGHT”button to select, press “ENTER” button to confirm

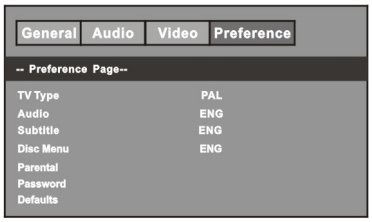

MENU INSTRUCTIONS

GENERAL SETUP PAGE

FIRST LEVEL MENU	SECOND LEVEL MENU
TV DISPLAY	NORMAL/PS
	NORMAL/LB
	WIDE
ANGLE MARK	ON
	OFF
OSD LANG	ENGLISH
	PORTUGUESE
	SPANISH
	CHINESE
SPDIF OUTPUT	SPDIF OFF
	SPDIF/RAW
	SPDIF/PAN
CAPTIONS	ON
	OFF
SCREEN SAVER	ON
	OFF
HDCD	OFF
	1X
	2X

NORMAL/PS

This is selected when the unit is connected with a normal TV.
Wide-screen images are shown on the screen but with some parts cut automatically.
NORMAL/LB
This is selected when the unit is connected with a normal TV
Wide-screen images are shown on screen, with black beits on the top and bottom
WIDE
This is selected when the unit is connected with a wide-screen TV
ANGLE MARK
The only works when there is an angle mark on the disc.
& Select “ON”， the screen shows the mark when playing a VIDEO disc
& Select “OFF”, the mark is not shown
OSD LANGUAGE
When select a language, the screen show this language.
CAPTIONS
The hidden subtitle is shown or turn off.
SCREEN SAVER
Start the screen saver, the screen saver image appears when the unit stops or the image is motionless for a few seconds. This saver can keep the screen from being damaged.

AUDIO Setup Page

FIRST LEVEL MENU	SECOND LEVEL MENU	THIRD LEVEL MENU
SPEAKER SETUP	DOWNMIX	LT/RT
		STEREO
		V SURR
		5.1 CH
	FRONT SPEAKE	LARGE
		SMALL
	CENTER SPEAKER	LARGE
		SMALL
		OFF
	REAR SPEAKER	LARGE
		SMALL
		OFF
	SUBWOOFER	ON
		OFF
SPDIF OUTPUT	SPDIF OFF	
	SPDIF/RAW	
	SPDIF /PCM	

VIDEO Setup Page

Follow the operation in structions stated in ”VIDEO menu setup”in combination with desired option In the following fig ure.

FIRST LEVEL MENU	SECOND LEVEL MENU
COMPONENT	OFF
	YUV
	RGB
SHARPNESS	HIGH
	MEDIUM
	LOW
BRIGHTNESS	00
CONTRAST	00

PREFERENCE SETUP

FIRST LEVEL MENU	SECOND LEVEL MENU	THIRD LEVEL MENU
TV TYPE	**MULTI.SYSTEM**	
	NTSC	
	PAL	
AUDIO	ENGLISH	
	PORTUGUESE	
	SPANISH	
	CHINESE	
	OFF	
SUBTITLE	ENGLISH	
	PORTUGUESE	
	SPANISH	
	CHINESE	
	OFF	
DISC MENU	ENGLISH	
	PORTUGUESE	
	SPANISH	
	CHINESE	
	OFF	
PARENTAL	1 KID SAF	
	2 G	
	3 PG	
	4 PG 13	
	5 PGR	
	6 R	
	7NC17	
	8ADULT	
PASSWORD	CHANGE	
DEFAULTS	RESET	

TV TYPE:

Choose VIDEO mode according to TV type, it will obtain the best effect.

AUDIO, SUBTITLE and DISC MENU:

All parameter about these options will change after your setup, but if there is no sound, subtitle and language in disc, setup does not working.

PARENTAL:

The content of a disc with lock function is evaluated by grades. You can select an age grade as your need (some VIDEO without this function). You may enter the password, then all grades can be controlled freely. The initial password is“0000”, and its default status is “OFF”,this function is unavilable in this case. NOTICE: choose

“RESET”option in“Default”, parental will restore to the initial status.

DEFAULT:

Choose “RESET”option, all menus will restore to the initial status.

TROUBLESHOOTING

If you experience the following problems while using the unit, this troubleshooting guide can help you.

NO SOUND

Check if the unit is connected securely.
Make sure you operate the TV or amplifier correctly.

NO IMAGE , IMAGE ROLLSAND NO COLOR

Check if the unit is connected securely.
Make sure you operate the TV correctly.
Make sure you set the color system correctly.

BAD SOUND QUALITY

Make sure the audio output mode is set correctly.
Make sure the audio connection between the unit and amplifier is right.

DISC CAN NOT BE PLAYED

There is no disc in the unit.
Insert the disc on the disc tray properly with the label side up.
Clean the disc.
Moisture has condensed in the unit. Remove the disc and leave the unit on for about one hour.

REMOTE CONTROL DOES NOT WORK

Remove barriers between the remote control and the unit.
Replace the batteries with new ones.
Point the remote control at the remote control sensor of the unit

Add specification of product

Add schematic diagram